Product does not have internet or data storage capabilities.

OREGON SCIENTIFIC

Dear Parent/Guardian,

Thank you for choosing the **B-book™ Learning Laptop**.
Designed with fun in mind,
B-Book™ Learning Laptop is packed with stimulating games and activities that will make an invaluable contribution to your child's development.
The activities to help improve your child's skills include:
language, mathematics, logic, memory, music.
B-Book™ Learning Laptop provides a dependable and realistic introduction to computers and encourages creativity and independent learning.
Learning has never been so much fun!

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc.
© 2011 Mattel Inc. All Rights Reserved.

Table of Contents

Chapter 1
About the **B-book™ Learning Laptop** 1

Chapter 2
Getting Started 3

Chapter 3
Game Rules and Selection 6

Chapter 4
Useful Features and Controls 8

Chapter 5
Activities
Word 10
Mathematics 11
Logic 12
Memory 13
Animal Fun 13
Keyboard Skills 14
Music 14
Games 15
Gadgets 16

Chapter 6
Troubleshooting 17

Chapter 1

About the B-Book™ Learning Laptop

Features
30 Activities
- Word
- Mathematics
- Logic
- Memory
- Animal Fun
- Keyboard Skills
- Music
- Games
- Gadgets

Multimedia
- Digital Sound/Animation

Display
- LCD screen

Audio
- The voice of Barbie®

Energy Saving Features
- Automatic shut-down

The **B-book™ Learning Laptop** is supplied with the following parts: (Please contact your retailer if any parts are missing.)
1 - Unit
2 - Instruction Manual

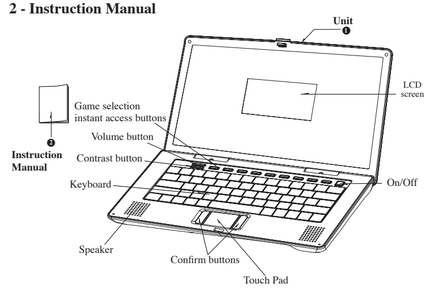

Exterior Features

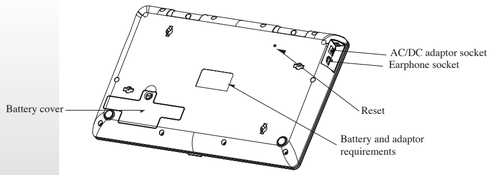

Chapter 2

Getting Started

The **B-Book™ Learning Laptop** operates on 2 AA-size batteries or a 6V AC/DC adaptor (not included).



Battery Installation

1. Make sure the unit is turned off.
2. Open the battery cover at the back of the unit using a coin or a flat head screwdriver.
3. Insert 2 AA-size batteries (note the correct polarity: +, -).
4. Replace the cover.

Caution
- Do not mix different types of batteries or old and new batteries together.
- Only use batteries of the same or equivalent type as recommended.
- Remove all batteries when replacing.
- Remove batteries if the unit is not going to be used for long periods of time.
- Do not dispose of batteries in fire.
- Do not recharge non-rechargeable batteries.
- Rechargeable batteries should be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Remove exhausted batteries from the toy.
- Do not short-circuit the supply terminals.

AC/DC Adaptor Connection

Please turn off the unit before plugging in the AC/DC adaptor to prevent damage to the unit. Plug the adaptor into the adaptor socket located on the left hand side of the unit. Plug the adaptor into a wall outlet.



Caution
- The unit must not be connected to a power supply greater than 6V.
- Only use the recommended adaptor.
- The adaptor is not a toy.
- Do not short-circuit the supply terminals.
- Toys should be disconnected from the power source before cleaning.
- Due to AC/ DC adaptor connection, this product is not suitable for children under 3 years to use without adult supervision.
- In an environment prone to static discharge, the unit may malfunction.
- To reset, press the reset button at the back of the laptop, remove the batteries or disconnect the adaptor for at least 10 seconds before connecting the power supply again.

Storage & Care

To ensure that the product enjoys a long life, please follow these simple rules:
- Regularly examine the unit for damage to the cord, plug, enclosure and other parts. In the event of such damage, the unit must not be used with the adaptor until the damage has been repaired.
- Always disconnect the power supply before cleaning.
- Keep the unit clean by wiping the exterior of the unit with a dry cloth.
- Avoid getting the unit wet.
- The unit should not be dismantled.
- Always store the unit away from direct sunlight and high temperatures.
- Avoid leaving the unit in a car where it is exposed to direct sunlight.
- The unit should not be subjected to extreme force or shock.
- Please keep this manual for future reference.

Starting the B-Book™ Learning Laptop

Open the unit by pushing in the lock at the front of the laptop and lifting up the laptop cover. Turn on the **B-Book™ Learning Laptop** by pressing the ⏻ button located at the top right corner of the keyboard. At the end of a session, remember to turn off the power by pressing the same button.

Auto-off

If there is no input on the unit for a couple of minutes, the unit will automatically turn itself off to conserve power. To start playing again, press the ⏻ button to turn the unit back on.

Chapter 3

Game Rules and Selection

The **B-Book™ Learning Laptop** includes 9 catergories: Word, Mathematics, Logic, Memory, Animal Fun, Keyboard Skills, Music, Games and Gadgets.



The category selection menu will scroll to the next category every 5 seconds. The player can also use the ◀ , ▶ arrow keys or the touch pad and press Enter to select a catagory. All the games under a category are listed in the game selection menu. The player can use the ◀, ▶ arrow keys or the touch pad to scroll through the activity names and press Enter to play.



At anytime, press the instant access buttons to go straight to a particular game category or press the menu key to go to the start of the category selection list.

Attempts
In most activities the player will have three attempts per question. Barbie® will reveal the correct answer after three incorrect attempts.
If there is no input after 30 seconds, Barbie® will repeat the instruction prompt.

Scoring
At the end of each game round (generally consisting of ten questions), a summary score screen will appear so the player can see how well they have done. After the successful completion of all the levels in an activity or if time has run out, a 'Play Again?' screen will appear, allowing player to choose whether they want to play again or exit and choose another activity.

Time Limit
For most games, the player has a time limit to select an answer, with the length depending upon the type of question and game.

Chapter 4

Useful Features and Controls

Keyboard
B-Book™ Learning Laptop features a fully functional computer keyboard.

Game Menu
Press the ☰ button to go to the main category selection menu.

Instant Access Buttons
Pressing an instant access button will bring the player to a list of activities in the specified category.



Arrow Keys and Touch Pad
Use the touch pad and the arrow keys to view a selection or navigate inside the games where available.

Confirm buttons
Press to confirm a selection. They share the same function as the enter key.



Volume and Contrast Keys
Press to adjust the volume and contrast. They are located at the top left of the keyboard. The choices are high, medium and low.

Music On/ Off
Press ♪ to turn the background music on and off during the game category, game selection and game play (except during music games).

Repeat
Press Repeat to repeat a sentence or an instruction.

Help
Press Help to receive hints to a question. Using this function will reduce the total score for the current question. Note: Not all games have this function.

Answer
Press Answer to reveal the correct answer to a question. The player needs to think carefully before pressing this button as no points will be awarded for that question.

Delete
Press Delete to remove the previously entered letter or number.

Enter

Press Enter to confirm a selection.

Demo

Press Demo to see a demonstration of some of the exciting features and activities in the **B-Book™ Learning Laptop**.

ESC

Press Esc to return to the previous screen or to exit a game.

Chapter 5

Activities

Word

Words Galore (01)

Select a topic and learn a word.

Pair Up (02)

Find the words that best match one another - The 2 categories of game play are "Parent-Child Match Up" and "Same-Thing Match Up".

Spelling Garden (03)

Remove an extra letter to spell a word.

Lollipop Order (04)



Spell the word shown on the screen by lining up the lollipops.

Mathematics

In the following math activities, the answer is submitted from the left with 2-digit answers in level 1 and from the right in level 2. The column can be changed using the arrow keys.

Let's Add (05)



Complete the addition equation (vertical sums).

Let's Take Away (06)



Complete the subtraction equation.

Plus or Minus (07)



Select the correct operation sign for the equation.

Be On Time (08)

Select the correct time shown on the clock.

Nail Polish Lineup (09)

Re-organize the numbers within the given order.

Logic

Shopping Spree (10)

Help Barbie® pickup all of the shoes without repeating her steps or hitting the obstacles.

Complete the Pattern (11)

Type in the answer to complete the sequence.

Which is Different (12)

Find the item or character that looks different from the rest.

Memory

Dolphin Show (13)

Remember and repeat the number sequence as the dolphins jump out of the water.

Match it (14)



Remember what is shown and identify it from a selection of three similar objects or characters.

Number Songs (15)

Remember the sequence of the tones played and repeat it.

Sequin® Shuffle (16)



Watch carefully and remember which Sequin® has the Bone.

Animal Fun

Animal Feeding Time (17)

The animals are hungry. Help Barbie® feed the right food to the right animal.

Cats & Dogs (18)

Make sure that Sequin® and Blissa® are fed the right food.

Keyboard Skills

Butterfly Letters (19)

Type out the word before the butterfly flies off the screen.

Hyper Typer (20)

Follow the hands on the screen to learn to type using the correct fingers.

Perfume Sprayer (21)



Help Barbie® spray the letters before they reach the left of the screen.

Music

Follow Me (22)

Select a song, choose a musical instrument and follow the highlighted keys shown on the screen to play along.

Rock Out (23)

Have fun composing a melody. Select an instrument and compose a melody. Press the repeat key to listen to your creation.

Disco Diva (24)

Use the arrow keys and press enter to choose a song to dance to. Use the arrow keys to make Barbie® dance.

Games

Playpen Trouble (25)



Repair the gaps in the playpen caused by the puppies and don't let them escape!

Sequin®'s Run Home (26)

Help Sequin® get home by crossing the river, but don't fall into the water!

Shoe Blitz (27)

Put the shoes in the right box, make sure they are colour coordinated.

Mystery Suprise (28)

Challenge yourself with questions randomly selected from the other games.

Fortune Cookie (29)

Select a fortune cookie and see what awaits you!

Gadgets

Calculator (30)

Perform Mathematical calculations. Use the arrow keys and space bar to create a sum, press enter to solve it!

Chapter 6

Troubleshooting

Developing learning products is a responsibility that we at Oregon Scientific take very seriously. We make every effort to ensure the accuracy and appropriateness of the information which forms the value of our products. However, errors can sometimes occur. It is important for you to know that we stand behind our products and we encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. Our service representatives will be happy to help you.
Before contacting an authorised service representative at 0871 222 1966, carry out the following simple checks. It may save you the time of an unnecessary service call.

No display
Are the batteries installed properly?
Do the batteries need replacing?

Black-out screen or abnormal display
Disconnect the power supply by removing the batteries for at least 10 seconds before connecting the power supply again.

In an environment prone to static discharge, the unit may malfunction.
To reset, press the reset button at the back of the laptop, remove the batteries or disconnect the

adaptor for at least 10 seconds before connecting the power supply again.
Conforms to safety requirements of ASTM F963, EN71 Parts 1, 2 & 3 and EN62115.
In an effort to continually improve our products, the actual screen display on the product may differ slightly from the diagrams shown.
Please retain this manual for future reference.

Oregon Scientific (UK) Ltd.
Unit 1, Switchback, Gardner Road,
Maidenhead, Berkshire SL6 7RJ.
Hotline number: 0871 222 1966
Email: technical@oregonuk.com
Website: www.oregonscientific.co.uk

Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Warning! Not suitable for children under 36 months. Small parts. Choking hazard.

DISPOSAL
Do not dispose of this product as unsorted municipal waste.
Such waste should be collected separately for special treatment.

300102923-00001-10 BN68 UK